

0. Contents NERVA EXE Workshop Manual

- 1. Body**
- 2. Maintenance and adjustments**
- 3. Removing the motor**
- 4. Transmission**
- 5. Components of the 76.8 V electrical system**
- 6. Components of the 12 V electrical system**
- 7. Front end**
- 8. Rear end**
- 9. Frame**
- 10. Nerva App**

1. Body

1.1. Diagrams	2
1.1.1. Front body	2
1.1.2. Seat, helmet case and rear sides	3
1.1.3. Central body, step floor and lower fairing	4
1.1.4. Handlebar covers	4
1.1.5. Mudguards / rear skirt, rear indicators and rear light	5
1.1.6. Headlamp and front indicators	5
1.1.7. Instrument panel	6
1.2. Introduction to the body joints	7
1.2.1. Lugs	7
1.2.2. Plastic rivets	8
1.2.3. Clips/Tapping screws	9
1.2.4. Tabs	9
1.2.5. Clamps	9
1.3. Dismantling the front body	10
1.3.1. Removing the front wheel arch grille	10
1.3.2. Dismantling the front side	11
1.3.3. Removing the windscreen	14
1.3.4. Removing the central cover	15
1.3.5. Dismantling a front cover	16
1.3.6. Dismantling of the front cover and headlamp	18
1.3.7. Central structure and instrument panel	21
1.3.8. Dismantling the handlebar covers	23
1.3.9. Dismantling the leg protector	27
1.3.10. Front mudguard	29
1.4. Dismantling the central/rear body	30
1.4.1. Dismantling the seat	30
1.4.2. Dismantling the helmet case	30
1.4.3. Dismantling the rear assembly	32
1.4.4. Dismantling the passenger foot pegs	36
1.4.5. Dismantling the central body/step floors/lower fairing	37

2. Maintenance and adjustments

- 2.1. Pre-delivery inspection
- 2.2. Periodic maintenance plan
- 2.3. Adjustments
 - 2.3.1. Tightening of nuts and bolts
 - 2.3.2. Brake fluid level
 - 2.3.3. Front suspension check
 - 2.3.4. Rear suspension check
 - 2.3.5. Tyre check.
 - 2.3.6. Adjusting the headlamp beam
 - 2.3.7. Adjusting the mirrors
 - 2.3.8. Adjusting the tension of the seat opening cable
 - 2.3.9. Adjusting the tension of the charging connector opening cable
 - 2.3.10 Adjusting the steering lock

3. Removing the motor

- 3.1. General instructions.....2
- 3.2. Tightening torques.....2
- 3.3. Diagram.....2
- 3.4. Removing the motor3

4. Transmission

- 4.1. Troubleshooting
- 4.2. Transmission characteristics
- 4.3. Tightening torques
- 4.4. Diagram of belt transmission and transmission covers
- 4.5. Removing the transmission covers
- 4.6. Toothed belt check
- 4.7. Tensioning of the toothed belt
- 4.8. Removing the belt
- 4.9. Changing the gearbox final transmission oil
- 4.10. Diagram of the gearbox
- 4.11. Dismantling the gearbox
- 4.12. Changing the gearbox bearings and seals
- 4.13. Changing the guide bearing of the crown gear shaft
- 4.14. Changing the motor rotor

5. Components of the 76.8 V electrical system

- 5.1. Troubleshooting
- 5.2. Diagram of the Nerva Exe electrical components
- 5.3. Introduction to the Nerva Exe electrical components
 - 5.3.1. Battery
 - 5.3.2. BMS (Battery Management System)
 - 5.3.3. Controller
 - 5.3.4. Charger
 - 5.3.5. DC/DC Converter.
 - 5.3.6. Main or maintenance switch
- 5.4. Personal Protection Equipment (PPE)
- 5.5. Disconnection of the main switch
- 5.6. Removing the controller
- 5.7. Charging cable check
- 5.8. Charger operation check
- 5.9. Measuring the charging current
- 5.10. Removing the charger
- 5.11. Measuring the DC/DC converter operation
- 5.12. Removing the DC/DC converter
- 5.13. Measuring the DC/DC converter voltage drift
- 5.14. Removing the BMS
- 5.15. Measuring the battery voltage
- 5.16. Removing the battery modules

6. Components of the 12 V electrical system

- 6.1. General instruction
- 6.2. Measuring the 12 V system from the controller connector
- 6.3. Access to the connectors
- 6.5. Connector pin-out, versions 2 and 3
- 6.7. Left switch cluster, versions 2 and 3
- 6.8. Switch cluster “P” button
- 6.9. Rear or front brake light pushbutton
- 6.10. Driving mode switch on right cluster
- 6.11. “R” button (reverse) on right cluster
 - 6.11.1. Dismantling the switch clusters
- 6.12. Contact closing
- 6.13. Side stand
- 6.14. Accelerator
 - 6.14.1. Measuring the isolated accelerator signal.
- 6.15. Horn
- 6.16. Headlamp
- 6.17. Rear light
- 6.18. Numberplate light
- 6.19. Front indicators
- 6.20. Rear indicators
- 6.21. 12 V circuit fuse
- 6.22. Dismantling the instrument panel
- 6.23. Checking the charger’s 12 V output
- 6.24. Changing the accelerator connectors
- 6.25. Earth connection installation

7. Front end

- 7.1. Troubleshooting
- 7.2. Front end characteristics
- 7.3. Tightening torques
- 7.4. Removing the front brake callipers
- 7.5. Changing the brake pads
- 7.6. Brake disc check
- 7.7. Rim check
- 7.8. Removing the front wheel
- 7.9. Removing the front brake disc
- 7.10. Changing the front wheel bearings
- 7.11. Removing the fork legs
- 7.12. Steering adjustment
- 7.13. Changing the steering axle bearings
- 7.14. Dismantling the forks
- 7.15. Filling with brake fluid
- 7.16. Bleeding the hydraulic system
- 7.17. Installation of counterweights.

8. Rear end

8.1. Troubleshooting.....	2
8.2. Rear end characteristics.....	3
8.3. Tightening torques.....	3
8.4. Damper characteristics.....	3
8.5. Removing the left damper	4
8.6. Removing the right damper	4
8.7. Adjusting the damper preload.....	5
8.8. Removing the right swingarm	6
8.9. Removing the rear brake caliper	10
8.10. Changing the brake pads	10
8.11. Brake disc check.....	10
8.12. Rim check	10
8.13. Bleeding the hydraulic system.....	10
8.14. Removing the rear wheel	10
8.15. Removing the rear brake disc	13

9. Frame

9.1. General instructions.....2

9.2. General diagram.....2

9.3. Frame side dimensions3

9.4. Frame top dimensions4

10. Nerva App

10.1. Installation of the Nerva App 2